

## HOW TO USE A MANUAL TENSIONER & SEALER

First, before using any tool, be sure to read and thoroughly understand all of the information for safe operation found in the owner's manual. Secondly, protective eyeglasses with side shields, heavy gloves, and steel toe shoes must be worn. Lastly, never modify a tool, especially by extending the handle to get more leverage. This could result in a serious injury.



1. Depress and hold the tension lever down. Feed the cut end of the strap under the gripper and so it touches against the tool housing. Make sure the strapping extends out front of the tensioner at least two inches.



4. Place the proper open metal seal over the two straps as shown.




2. Feed the other end of the strapping around the package and through the slot of the cutter mechanism and also through the slot of the windlass spool.



5. Spread open the proper sealer completely and place it square on top of the seal. Now move the sealer levers together to crimp the seal. Open the levers and remove the sealer to reveal the finished seal.



3. Now move the tension lever forward and back until one achieves the desired tension.

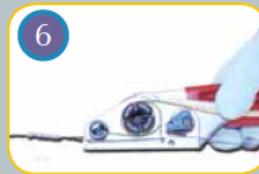

6. Depress and hold the tension lever down completely to cut the strapping and to release the tool by pivoting the tensioner off to the side.